


**NOTE: RINSE SPRUES IN WARM
SOAPY WATER TO REMOVE ANY
MOULD RELEASE BEFORE ASSEMBLY**



MALINOIS

PARTS CAN BE FOUND AS RESIN

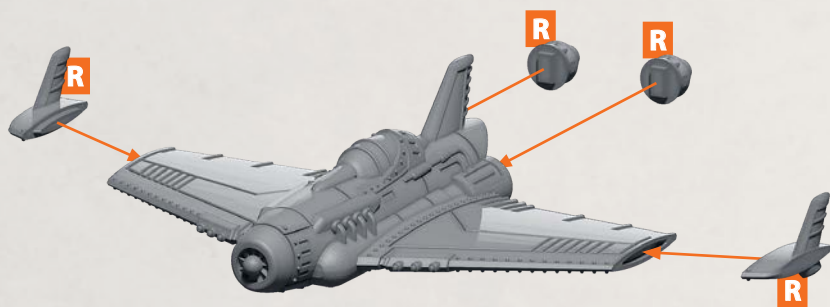

R = RESIN