

-0+0




RINSE SPRUES IN WARM SOAPY WATER TO REMOVE ANY MOULD **RELEASE BEFORE ASSEMBLY.**

\$

MAXIMILIAN AERIAL LINEBREAKER

PARTS CAN BE FOUND ON THE STARK IMPERIUM PART SPRUES



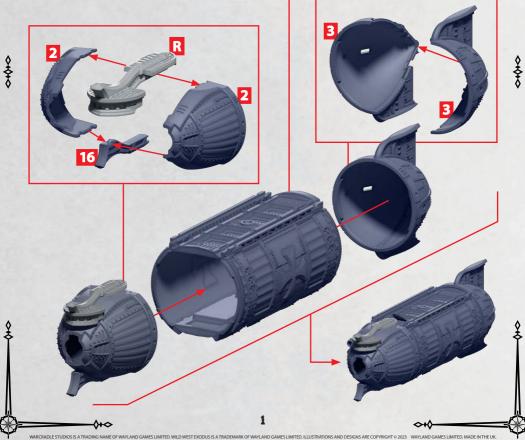





RINSE SPRUES IN WARM SOAPY WATER TO REMOVE ANY MOULD RELEASE BEFORE ASSEMBLY.

