



-0+0-

∧+<>



RINSE SPRUES IN WARM SOAPY WATER TO REMOVE ANY MOULD RELEASE BEFORE ASSEMBLY.

HULL TO TAIL ASSEMBLY FOR REPUBLIC, CONSTELLATION, TICONDEROGA, STEWARD AND RANGER PARTS CAN BE FOUND ON THE UNION AERIAL SQUADRONS SPRUES



3

!! IMPORTANT !! ENSURE YOU HAVE THE RIGHT UNDERSIDE PANEL FOR YOUR CHOSEN BUILD – PART **14, 37** OR **43** (SEE PAGE 1 FOR DETAILS)



2000

-0+0-





RINSE SPRUES IN WARM SOAPY WATER TO REMOVE ANY MOULD RELEASE BEFORE ASSEMBLY.


0

REPUBLIC CLOUDRAKER AIRSHI PARTS CAN BE FOUND ON THE UNION AERIAL SQUADRONS SPRUES



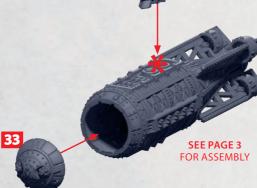

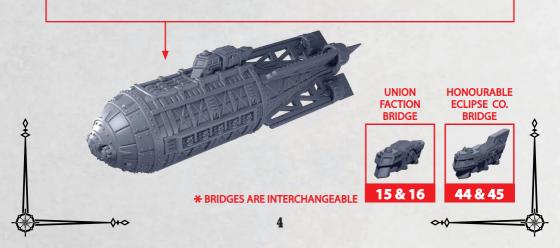

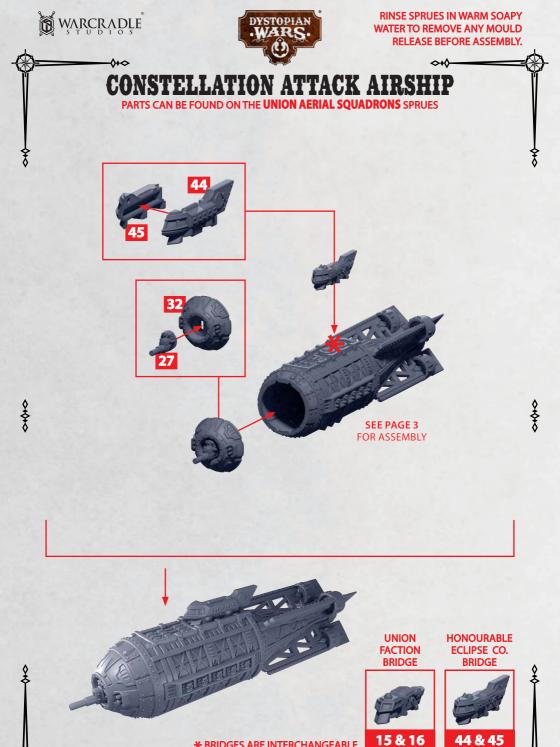

* BRIDGES ARE INTERCHANGEABLE 5

 \diamond

 $\diamond \bullet \circ$



2000

-0+0-



RINSE SPRUES IN WARM SOAPY WATER TO REMOVE ANY MOULD **RELEASE BEFORE ASSEMBLY.**

TICONDEROGA ASSAULT AIRS


PARTS CAN BE FOUND ON THE UNION AERIAL SQUADRONS SPRUES



34

FOR ASSEMBLY

SEE PAGE 3

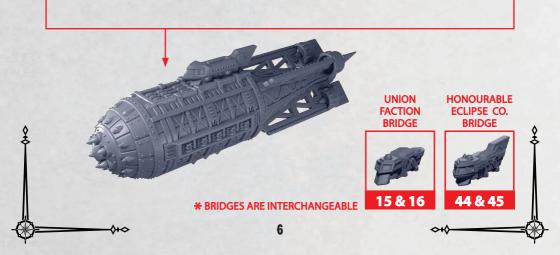



2000

-0+0




RINSE SPRUES IN WARM SOAPY WATER TO REMOVE ANY MOULD RELEASE BEFORE ASSEMBLY.

~+C


STEWARD SENTRY AIRSHIP PARTS CAN BE FOUND ON THE UNION AERIAL SQUADRONS SPRUES



36

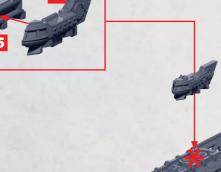

SEE PAGE 3 FOR ASSEMBLY

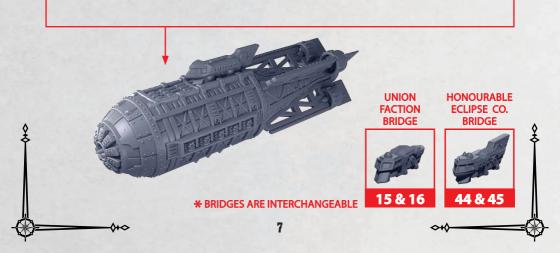



~~~~


-0+0




RINSE SPRUES IN WARM SOAPY WATER TO REMOVE ANY MOULD RELEASE BEFORE ASSEMBLY.

0

## RANGER RECON AIRSHIP

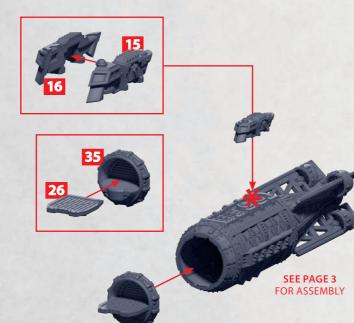

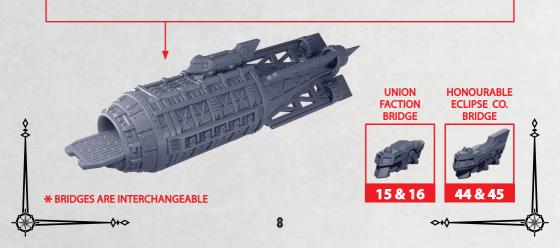

WARCRADLE S T U D I O S

~~~~~

\$+0



RINSE SPRUES IN WARM SOAPY WATER TO REMOVE ANY MOULD **RELEASE BEFORE ASSEMBLY.**

0









~~~