




SCAN THIS CODE OR VISIT
WILDWESTEXODUS.COM
 FOR ASSEMBLY GUIDES AND MORE!

WEX991399027



5 060504 864923

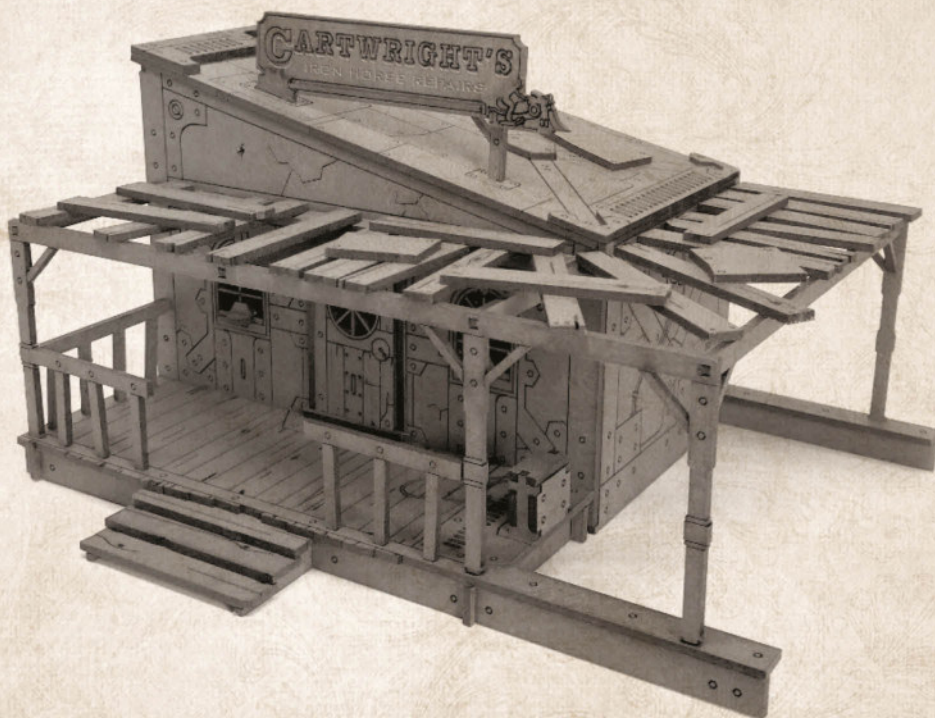

RED OAK CARTWRIGHT

PART OF THE



@WILDWESTEXODUS



@WARCRADLESTUDIOS



WARNING! NOT A TOY. AGE 14+
 HOBBY GAMING PRODUCT
 CONTAINS SMALL PARTS



ACHTUNG! KEIN SPIELZEUG. ALTER 14+
 HOBBY SPIELPRODUCT
 ENTHÄLT KLEINE TEILE



PRECAUCIÓN! NO ES UN JUGUETE EDADES. 14+
 PRODUCTO DE HOBBY
 CONTIENE PIEZAS PEQUEÑAS



ATTENTION! PAS UN JOUET. ANS 14+
 PRODUIT DE JEU HOBBY
 CONTIENT DE PETITES PIÈCES


THIS PRODUCT CONTAINS MEDIUM DENSITY FIBREBOARD (CLASS E1)




WARCRADLE STUDIOS IS A TRADING NAME OF WAYLAND GAMES LIMITED. WILD WEST EXODUS IS A TRADEMARK OF WAYLAND GAMES LIMITED. ILLUSTRATIONS AND DESIGNS ARE COPYRIGHT © 2018 WAYLAND GAMES LIMITED. ASSEMBLED IN THE UK.




Parts may need careful removal from the MDF boards with a scalpel, and light sanding of any rough edges. We recommend testing assembling sections before permanently gluing together.

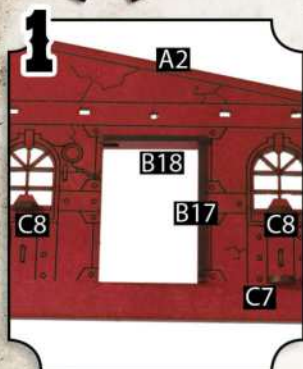


- Connect parts labelled C8 & C7 to A2.
- Insert B18 then B17, making sure the notch at the bottom of B17 faces towards you.
- Push B18 as far right as possible.

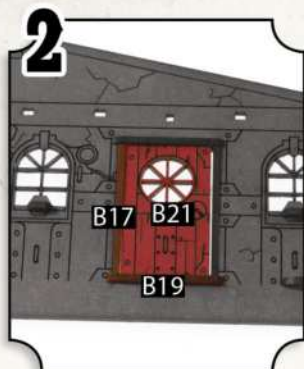


- Glue a second B17 on the other side of the doorway, notch facing the same way as Step 1.
- Hold B19 & B21 together and push into place.

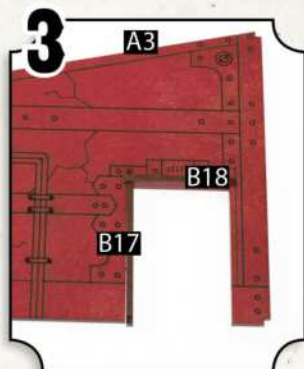


- Insert B18 then B17 into A3, making sure the notch at the bottom of B17 faces towards you.
- Push B18 as far left as possible.

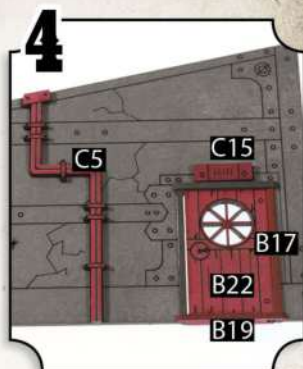


- Glue a second B17 on the other side of the doorway, notch facing the same way as Step 1.
- Hold B19 & B22 together and push into place.
- Glue C5 & C15 in place.

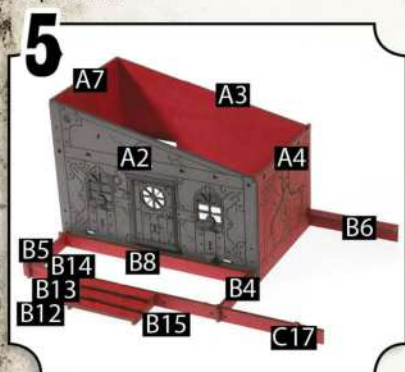


- Combine A2, A3, A4, A7 & B6.
- Connect B5, C17, B4 & B8.
- Slot 2x B15 into C17.
- Connect B12, B13 & B14 as shown.
- Connect B5 & B4 to A2.

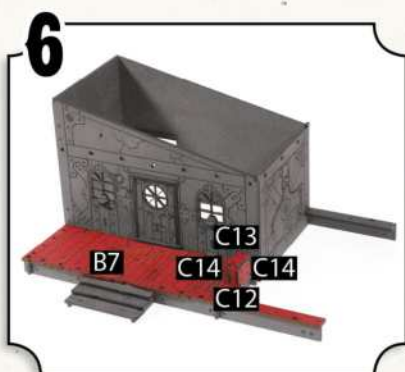


- Connect B7 to the front wall (A1).
- Combine 2x C12, 2x C14 & C13 as shown, then connect to B7.

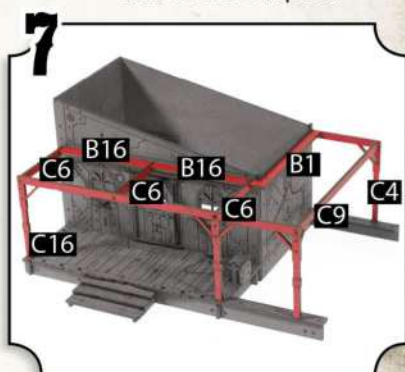


- Connect 2x B16 & 3x C6 to A2.
- Connect B1 to A4.
- Connect C9 to C16 & C4, then attach to building as shown.

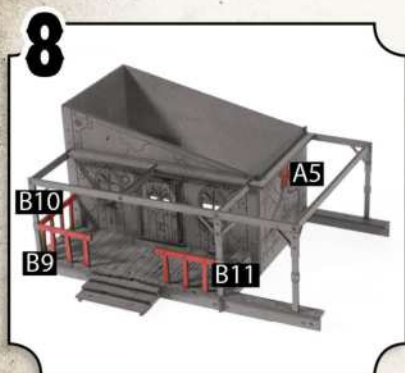

- Connect B9, B10 & B11 to the porch floor (A5).
- Glue A5 in place on A4.

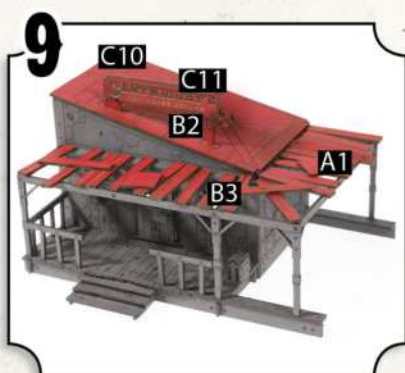

- Connect 'Repairs' or 'Delivery' sign (C11) to C10, then connect B2 to C10. Place onto the building (do not glue).
- Place parts labelled B3 & A1 where shown. Place longer planks (B3) on the corner section (where C16 & C9 connect).

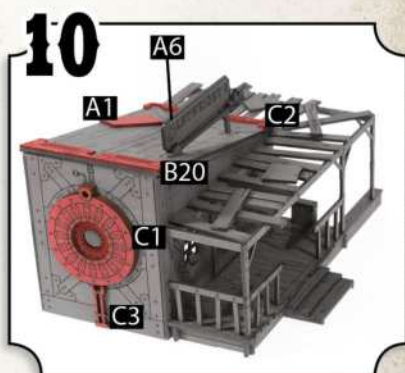

- Glue C3 & C1 in place on the large side wall (A7).
- Glue C2, B20 & A6 in place on the roof (C10).
- A1 shown as an example of placement.