



SCAN THIS CODE OR VISIT
WILDWESTEXODUS.COM
 FOR ASSEMBLY GUIDES AND MORE!

WEX991399034



RED OAK PROSPECTOR'S SHACK

PART OF THE **DYSTOPIAN AGE**



@WILDWESTEXODUS



@WARCRADLESTUDIOS



WARNING! NOT A TOY. AGE 14+
 HOBBY GAMING PRODUCT
 CONTAINS SMALL PARTS



ACHTUNG! KEIN SPIELZEUG. ALTER 14+
 HOBBY SPIELPRODUCT
 ENTHÄLT KLEINE TEILE



PRECAUCIÓN! NO ES UN JUGUETE EDADES. 14+
 PRODUCTO DE HOBBY
 CONTIENE PIEZAS PEQUEÑAS



ATTENTION! PAS UN JOUET. ANS 14+
 PRODUIT DE JEU HOBBY
 CONTIENT DE PETITES PIÈCES

THIS PRODUCT CONTAINS MEDIUM DENSITY FIBREBOARD (CLASS E1)




WARCRADLE STUDIOS IS A TRADING NAME OF WAYLAND GAMES LIMITED. WILD WEST EXODUS IS A TRADEMARK OF WAYLAND GAMES LIMITED. ILLUSTRATIONS AND DESIGNS ARE COPYRIGHT © 2018 WAYLAND GAMES LIMITED. ASSEMBLED IN THE UK.




Parts may need careful removal from the MDF boards with a scalpel, and light sanding of any rough edges. We recommend testing assembling sections before permanently gluing together.

1

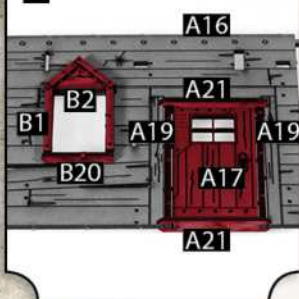

- Glue B2 & B20 to A16.
- Glue B1 on top of B2.
- Combine 2x A21, 2x A19 & A17. Slide doorway into A16.

2

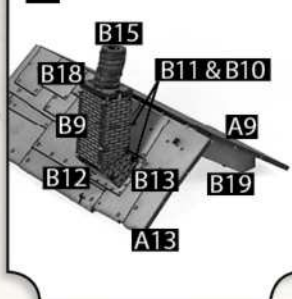


- Combine A9, A13 & 2x B19.
- Combine B9, B10, B11, B12, B13 & B14 as shown.
- Glue B18 & 7x B15 onto the chimney.
- When assembling the shack, place roof on without gluing.

3




- Combine A15, A16, B22 & B23.
- Combine A1, B5, B6, B7 & B8.
- Attach porch to A16.
- Glue B2 & B20 to B22.
- Glue B1 on top of B2.
- Repeat above two points on back wall (A15) for the window.

4

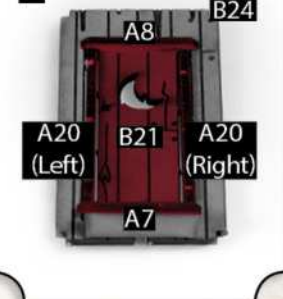

- Insert A8 & A20 (Left), making sure the notch at the bottom of A20 faces towards you.
- Push A8 as far left as possible.
- Insert A20 (Right).
- Hold B3 & B5 together and push into place.

5

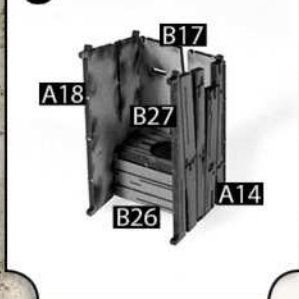

- Combine A14, A18, B17 & B26 as shown.
- Lastly connect B27.

6




- Glue B24 (front wall) in place.
- Glue B25 to B24.
- Place B16 on top (do not glue).

7




- If the outhouse is assembled without the door, doorframe & B25 (step), it can be placed flush with the shack to form an extension. (Place the roof on backwards).*

8

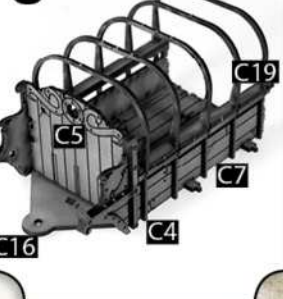


- Combine C5, 2x C7 & C16.
- Glue C4 to C7 as shown, repeat of other side.
- Combine 5x C1 & 2x C19, glue to wagon.

9

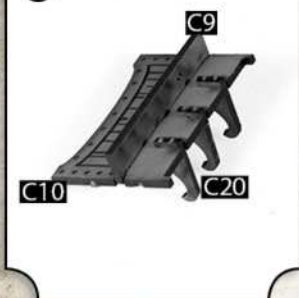


- Combine C9, C10 & 3x C20.

10

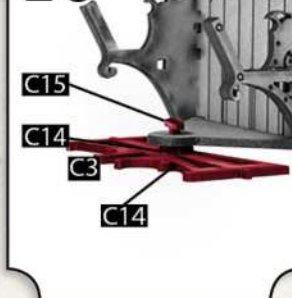


- Thread C15 through C16, C14, C3 (engraved detail facing upwards), then another C14 (glue this last C14 to C15).

11

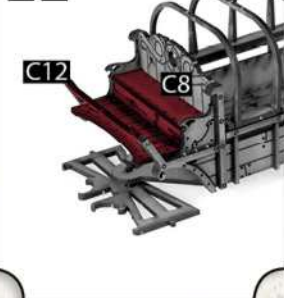

- Insert the seating (from Step 9) into the wagon as shown.
- Glue C12 in place.
- Place C2 on C3 (shown on cover image).

12

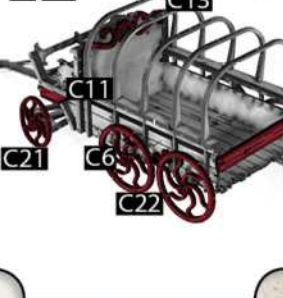

- Connect C11 to side of wagon.
- Connect C21 & 2x C22 where shown. Glue part C6 on the centre of each wheel.
- Repeat above points on the other side. Glue C13 as shown.
- A2, B3, B4, C17 & C18 can be used anywhere.